


Technical Data


FITTING SHOULDER HARNESSSES AND ANTERIOR TRUNK SUPPORTS

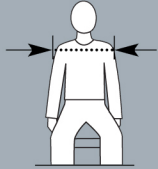

S	11"-13" (28cm-33cm)
M	13"-16" (33cm-41cm)
L	16"-19" (41cm-48cm)

Measure shoulder width. If the shoulder width falls between two sizes, consider other factors such as growth, weight changes, and clothing.

SPECIFICATIONS:

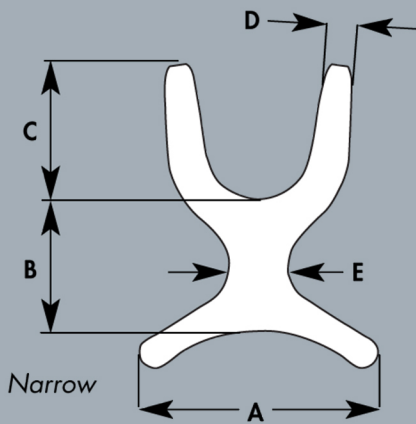

SIMPLICITY ⁺	Size	A	B	C	D	E
ONHARS	S	9" (23cm)	5-1/4" (13cm)	6-1/2" (17cm)	1-3/4" (41mm)	4-3/4" (12cm)
ONHARM	M	12" (30cm)	6-1/2" (17cm)	8" (20cm)	2" (51mm)	3-1/2" (89mm)
ONHARL	L	15" (38cm)	8" (20cm)	9" (23cm)	2-1/4" (57mm)	3-5/8" (92mm)
1000	Size	A	B	C	D	E
OXHARS	S	9" (23cm)	5-1/4" (13cm)	6-1/2" (17cm)	1-3/4" (41mm)	4-3/4" (12cm)
OXHARM	M	12" (30cm)	6-1/2" (17cm)	8" (20cm)	2" (51mm)	3-1/2" (89mm)
OXHARL	L	15" (38cm)	8" (20cm)	9" (23cm)	2-1/4" (57mm)	3-5/8" (92mm)
2000	Size	A	B	C	D	E
OCHARS	S	9" (23cm)	5-1/4" (13cm)	6-1/2" (17cm)	1-3/4" (41mm)	4-3/4" (12cm)
OCHARM	M	12" (30cm)	6-1/2" (17cm)	8" (20cm)	2" (51mm)	3-1/2" (89mm)
OCHARL	L	15" (38cm)	8" (20cm)	9" (23cm)	2-1/4" (57mm)	3-5/8" (92mm)